 


# MTCO digiMAX User Guide - AMAZON FIRE TV

## Adding MTCO digiMAX TV To Your Amazon Fire TV

Press the Home button and navigate left to the “search” magnifying glass. Type in by pressing the left side of the remote circle or use Voice Search to enter MTCO digiMAX TV. Then press down to select your entry to complete your search. Then scroll down to Apps And Games and select MTCO digiMAX TV.

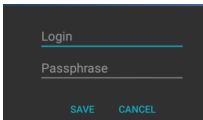

Select and click the Get button to download the App. Once the installation is completed, you will be prompted for a Login and Passphrase.

If you haven't received these, please contact our office Monday - Friday, 8:00 a.m.—5:00 p.m. After entering the Login and Passphrase press Save and then you are ready to stream.

 
## Navigating the App Content and Lists

Pressing left, right, up or down on the remote circle will highlight specific items. Pressing in the center of the remote circle will open a highlighted item. To return to the Home screen, press the Home button. Press the Back button to move back to the previous screen.



### Watching TV

From Home Screen, use the remote to highlight and expand the MTCO digiMAX TV icon and press the center of the remote circle. This action will open your on-screen Program Guide. To watch a channel, press up or down on the remote circle to highlight your program in blue and press the Play/Pause button to view a program that is currently airing.

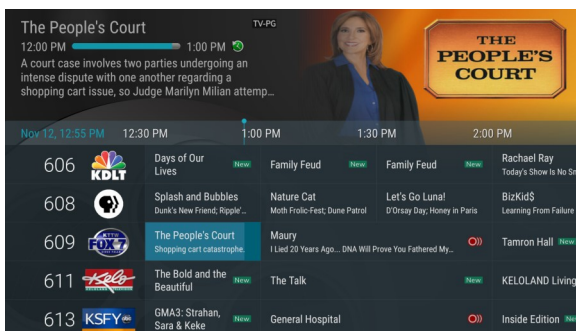

### Channel Surfing

 
While watching a program that is currently airing, press the top of the remote circle to view the next higher numbered channel. Press the bottom of the remote circle to view the next lower numbered channel.

### Enter Channel Number Feature

From the Program Guide, press and hold the center of your remote ring to open a screen that allows you to enter a specific channel number and then select Next to move to that channel number in the Program Guide.

### For You Feature

This feature is “For You” if you prefer a poster view format instead of a traditional Channel Guide look. For You gives you quick access to Channels You've Watched, Channels Popular in Your Area, your Recent Recordings, Movies On Now, Live Events On Now, and Movies On Soon. To access For You from the Program Guide, press the Back button on the remote to open the Tab bar, and press the left side of the remote circle to select the For You Option. Use your remote circle to navigate through and select what you would like to watch.

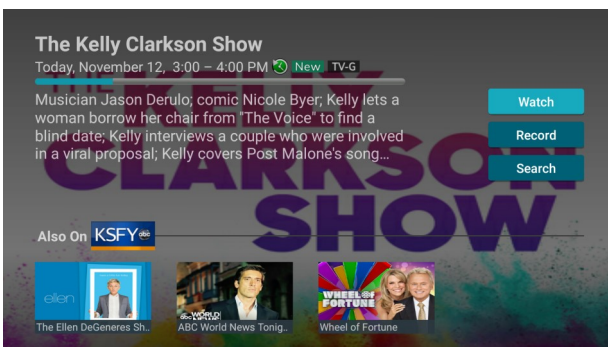

## On-Screen Guide Management

From the Home Screen, use the remote to highlight and expand the MTCO digiMAX TV icon and press the center of the remote circle. This action will open your on-screen Program Guide. Press Up, Down, Left or Right to scroll through your channel lineup. Pressing the center of your remote circle on a highlighted program will open a program screen with detailed information about the program. This screen will also display Watch, Record and Search options.

 
To Watch, use your remote to highlight the Watch button and press the center of your remote circle. To Record a program, highlight the record button and press in the center of your remote circle. See the Record Your Programs section of this guide to learn more about recording programs. Choose the Search feature if you want to see future dates and times that this program will air or programs that have been recorded or scheduled for recording.

## Recording Programs From the Guide

Select an upcoming program, press the center of your remote circle, highlight the record button and press the center of your remote circle to record. See the Recording Your Programs section of this guide for Recording instructions.

## Tab Bar

From the Program Guide, press the Back button on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Recording, Search, and Settings options. Details on the Recording and Search options will be covered on subsequent pages of this guide.

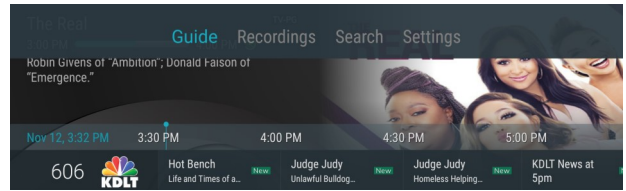

## Adding New Devices to Your Service

Before you add a new device to this service, go to Account in your Tab Bar from an activated device and scroll down to highlight Add Device. Press the center on your remote circle to generate a Login and Passphrase for the new device. Follow the directions at the beginning of this guide for adding this service to your new Amazon device, and use the displayed Login and Passphrase when you are prompted to activate this service.

 
## Recording Your Programs

### Recording Options

When you select Record, a screen will display that gives you the options to set a Recording for the program. You can record new episodes (Series - New Only), record all episodes of this program (Series - All), or a One-Time recording of this program. To further manage the recording, go to the Tab Bar and select the Recordings option.

### Watching Your Recordings

Recordings can be viewed from either the Recordings or Search screen options. Select Recordings from the Tab Bar to open the Recordings screen. Here you will see a list of your Current Recordings. Scroll through the list, highlight the program you want to watch, and press the Play/Pause button to start watching the program. If there are multiple recordings, scroll and highlight the one you want to watch and press the Play/Pause button to start watching the program.

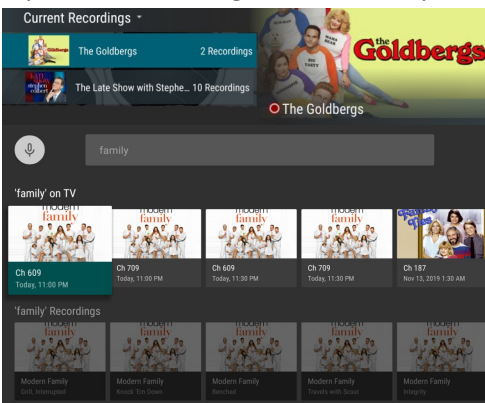


From any of your Search options, you can see a list of recordings for a specific program by highlighting and pressing on the Search button. This screen will display a list of current or future scheduled broadcasts of this program in the top row. Scroll down to the second row to highlight the list of recorded programs. If the highlighted program has been completely recorded, press the Play/Pause button on your remote to play the recording.

## Managing Your Recordings
 
### Current Recordings

To watch or delete current recordings, go to the Tab Bar and select the Recordings option. This screen will display the list of your recorded programs. Scroll up or down and press on the highlighted program that you want to manage. Scroll up or down to highlight a program and press the Play/Pause button to watch the program. The Checked Red circle to the left of the program indicates that it has not been watched while programs with a Red Play Button have been partially watched. Press Play/Pause on a partially-watched program to view the program where you left off. From this list you can either watch or delete your recorded programs by highlighting the Watch or Delete option. If you choose to Delete a program, you will receive a prompt asking to confirm your deletion.

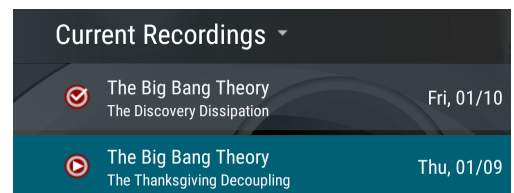

### Protect Recordings

To protect a recording, select the recording you would like to protect. Then from the options provided, select Protect, followed by Yes. To remove protection, select Unprotect followed by No.

 
## Future Recordings



Use the Future Recordings feature to manage settings for your future recordings. From the Recordings screen, press the center of your remote circle twice. From the dropdown, choose Future Recording to see a list of programs you have scheduled for recording. Scroll through the list, highlight, and press the center of your remote circle to open a Future Recording that you want to manage. To assure that you don't miss the beginning or ending of a program, highlight Edit and press the center of your remote to open a Recording Options screen. Highlight and press the center of your

remote circle to edit the Start and End Recording times for the program. Scroll up or down and press the center of your remote circle to adjust the time when you want your recording to start or end. Once you have finished your changes, highlight Save and press the center of your remote circle to save the changes. To delete a Future Recording, highlight Delete and press the center of your remote circle. You will receive a prompt asking to confirm your deletion.

## Series Rules

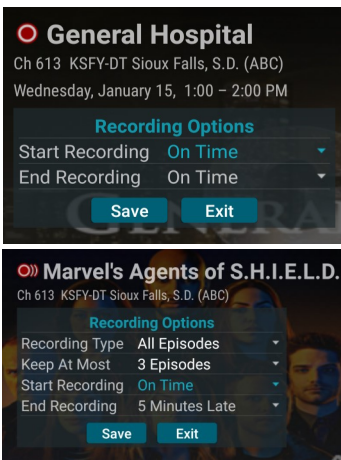


Use the Series Rules feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the center of your remote circle twice. From the dropdown, choose Series Rules to see a list of series programs you have scheduled for recording. Scroll through the list and highlight a series that you want to manage. Highlight Edit and press the center of your remote circle to open a Recording Options screen. Scroll up or down and press the center of your remote circle to choose Recording Type, Keep At Most, Start Recording, or End Recording options. Recording Type lets you keep All Episodes or Only New Episodes. Keep at Most lets you choose a maximum number of episodes that you want to keep of this series, or you can choose to keep All Episodes.

The Start and Stop Recording times option works the same way as it does in Future Recordings. Once you have finished your changes, highlight Save and press the center of your remote circle. You can also delete all of the Series Rules for a program by highlighting the Delete button and pressing the center of your remote circle. This only deletes the Series Rules and does not delete the Series Recordings.

## Restart TV

 This popular feature lets you go back to the beginning of any program that is currently airing that has the Restart Option. While watching live TV, press on the center of the remote circle to open a program Play bar. Press on the top

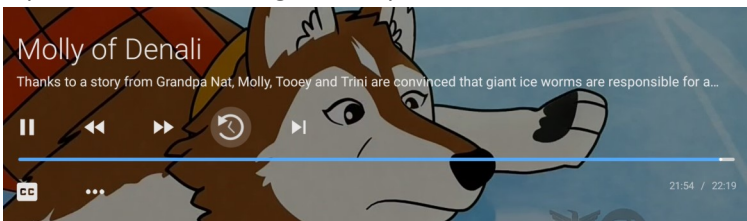

of the ring and tap the right side of the ring to highlight the Restart button. Press the center of your remote circle to restart the program from the beginning. Programs that have the Restart option display a Green Restart icon in the program description.

There may be programs that don't allow for the Restart function because of programming restrictions.


## Watching In - Progress Recordings

 If you would like to watch an "in-progress" recording from the beginning, use the Restart feature for the best experience .

## Pause Live TV


While watching live TV, press on the Play/Pause button on your remote to pause the program. After you have let the dog out, raided the refrigerator, or completed any other task, just press the Play/Pause button again to continue watching your program.

## Quick Guide + Closed Captioning

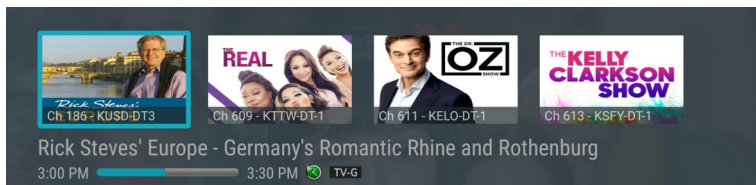


During a recorded or live program press the Menu button of the remote control to pull down a menu list of your most recently-watched channels. Scroll left or right to choose a new channel and press the center of your remote circle to watch it.

 Closed Captioning can be turned on when the Play Bar is visible by pressing the bottom part of the remote circle and highlighting the CC icon. Press the center of the remote circle to turn Closed Captioning On or Off.



## Fast Forward and Rewind Features

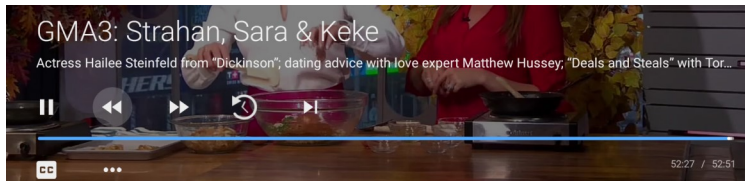 


There may be times when you want to go back and see that exciting play in the game or fast forward through commercials - don't tell the advertisers. To use this feature during an in-progress or recorded program, press the Fast Forward button on your remote control to advance the program, or press Rewind to go back.

The Progress Bar lets you track your movement through a program, and the timer helps you to see how far you are from the end of the program.

## Program Search Feature

 You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the Back button to open the Tab Bar. Scroll right to the Search feature, press on the bottom part of the remote circle, and then press the right side of the remote circle to open a typing pad. You can manually type in a program search by typing in letters of a program that you are searching for. To use the voice search, press and hold the Microphone button while saying the name of the program you are looking for.

The results will be more specific if you type in or pronounce more letters in the name of the program. You can also use the search feature to find specific types of program, like a program with the name "Today" in the title. To view your search results, highlight Next on the keypad and press the center of your remote circle. The search results will show programs that are currently airing or upcoming programs in the top row. Highlight a program, press the center of your remote circle, and then select Watch to view the program or Record to add this program to your future recordings. The bottom row will show programs that have been recorded or future recordings. Highlight a recorded program you want to watch and press the center of the remote circle to watch the program. You can also select Delete if you want to remove the program from your recordings.

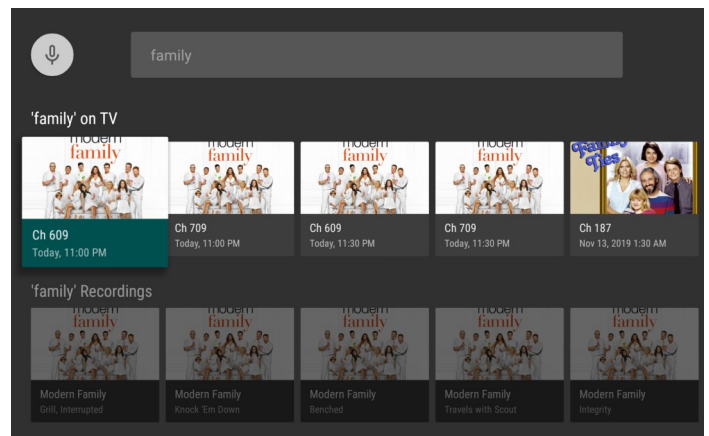

## Video on Demand

When you select the Video on Demand option (if available) from the Tab Bar there will be a variety of Movies and TV shows that you will be able to watch when YOU want to watch them. Use your Remote circle and navigate to make your selection and keep checking back for new releases and TV shows that will become available.

## Account Option - Add a New Device to MTCO digiMAX TV

Select Settings from the Tab Bar, followed by Account, then select Add Device. Once selected, a Login and Passphrase will be generated to use on your other device. Follow the directions at the beginning of this guide for adding this service to your new Fire Stick, and use the displayed Login and Passphrase when you are prompted to activate this service.