

## SETUP

Press 2 times to toggle backlight.  
HOLD for 3 seconds to enter SETUP.

Turns TV ON / OFF

TV

Turns Set Top Box ON / OFF

CBL

Controls **PLAYBACK** of live and recorded TV.

PAUSE

PLAY

SKIP-BACK

SKIP-FWD

REV

FWD

STOP

LIST

REC

Displays main cable **MENU**

MENU

Displays **INFO** for currently selected program

INFO

Displays Program **GUIDE**

GUIDE

**EXITs** current menu and returns to current program

EXIT

Controls **TV VOLUME**

VOL

CH

**MUTES** Volume

LAST

Returns to the **LAST** channel you were watching

MUTE

D

Used for special functions that are displayed on your cable menus

**DAY +/-**

Jump ahead or back one day in the while in the Program Guide

DAY

PAGE

**PAGE +/-**

Page up or down in Lists and while in the Program Guide

1

2

3

4

5

6

7

8

9

**Number Keys (0-9)**

Enter a channel number or enter options

Access the **ON DEMAND** program library

VOD

0

CC

**# (Closed Captioning)**

Press to turn Closed Captioning on/off

# Programming Silver Big Button Remote URC1090

## Programming your new remote to the proper set-top box (STB)

- 1) Press **CBL**
- 2) Hold **SETUP**, plus the colored hotkey, until **CBL** blinks twice

### Colored Hot Keys:

Amino 140/540 **Red (A)**

Innovative (IS) 5112 **Green (B)**

Kamai 7 **Blue (D)**

## **IMPORTANT - Before programming the TV, you must set up TV Power!**

(972) Device Power – Enable power signal to the TV.

- 1) Press the **TV** device button – Release.
- 2) Press and Hold the **SETUP** button until the red LED flashes twice, then Release.
- 3) Press **9 - 7 - 2** -- Two blinks.
- 4) Press **CH+** once to activate (2 blinks)

## Programming the TV by Simple Codes

- 1) Press and hold **SETUP** until LED blinks twice.
- 2) Press the **TV** key.
- 3) Press and hold down the digit key for your TV brand.
  - 1= Insignia / Dynex
  - 2= LG / Zenith
  - 3= Mitsubishi
  - 4= Panasonic
  - 5= Philips / Magnavox
  - 6= Samsung
  - 7= Sharp
  - 8= Sony
  - 9= Toshiba
  - 0= Vizio
- 4) Let go of the key when complete.



## Programming the TV by Scanning

- 1) Press the **TV** key.
- 2) Press and hold **SETUP** until the **TV** key blinks twice.
- 3) Type 9-9-1
- 4) Press **CH+** repeatedly until the TV turns ON or OFF.
- 5) Press **SETUP** key to save the working code.

## Direct Code Entry

- 1) Press the **TV** key.
- 2) Press and hold **SETUP** until **TV** key blinks twice.
- 3) Enter the 1st TV code for your brand from the code list.
- 4) Press the **TV** key to test the TV control. If the TV turns off, the setup is complete.
- 5) If the TV does not turn off, repeat this process using the next code for your TV brand.

### Setup Codes for Television

**Acer** 1339

**Admiral** 0093 0463

**Advent** 1570

**Affinity** 3716 3717

**Aiko** 0092

**Aiwa** 1362

**Akai** 0812 0702 1675

0765 1385

**America Action** 0180

**Anam** 0180

**AOC** 1589 2087 1365 1590

2014 2479 3707 3720

**Aomni** 1623

**Apex Digital** 2397 0748 0879

0765 1217

**Astar** 1548 1738

**Asus** 3340

**Audiovox** 1564 0451 0180 0092

1276 1766 1769 1865

1868 2121 2413 3065

**Auria** 2087 2277

**Aventura** 0171

**Bell & Howell** 0154

**Berkshire** 0047

**Bradford** 0180

**Broksonic** 0463 1938

**Candle** 0056

**Carver** 0054

**Celebrity** 0000

**Celera** 0765  
**Champion** 1362  
**Changhong** 0765  
**Citizen** 0060 0092 0056  
**Clarion** 0180  
**Coby** 3478 3627 2315 2344 2306  
2314 2326 2338 2340 2345  
2347 2348 2560 3629 1538  
**Commercial Solutions** 1447 0047  
**Concerto** 0056  
**Contec** 0180  
**Craig** 0180 3423  
**Crosley** 0054 0000  
**Crown** 0180  
**Curtis** 2397 3577 2352 2466  
2855 3228 1326  
**Curtis Mathes** 0702 0054 0093  
0060 0047 0154 0451 0145 1661 0056 1347 1959  
**CXC** 0180  
**Cytron** 1326  
**Daewoo** 1661 0661 0092  
0154 0451  
**Dell** 1264 1080 1863 2491  
**Denon** 0145  
**Digital Lifestyles** 1765  
**Disney** 1665 1892  
**Dumont** 0017  
**Durabrand** 0178 0171 0463  
0180 1665  
**Dynex** 2049 1463 1785 1810 2184  
**Electric Mirror** 3166  
**Electroband** 0000  
**Electrograph** 1755 1623  
**Electrohome** 0463 1570 1670  
**Element** 1886 1687 2183  
2964 3559  
**Elite** 1457  
**Emerson** 1864 1394 1886 0171  
0178 0154 0451 0463 0180  
1661 1665 1913 1944 1963  
2183 2776 3559  
**Emprex** 1765  
**Envision** 1589 2087 1365 2014  
**Epson** 1122  
**ESA** 0812 0171 1944 1963  
**Fisher** 0154 1362  
**Fluid** 2964

**Fujitsu** 0809  
**Funai** 0000 0171 0180  
1271 1904 1963  
**Futuretech** 0180  
**Gateway** 1756 1755  
**GE** 1447 0178 0047 0051  
0451 0765 1347 1547  
**GFM** 1864 1886 0171 1665 1963  
**Gibraltar** 0017  
**Go Video** 1823 1831  
**GoldStar** 0178 0056  
**GPX** 3196  
**Grunpy** 0180  
**Haier** 1753 1749 2309 1748 3382  
1570 2293  
**Hallmark** 0178  
**Hannspree** 1348 1351 2786  
**Harley Davidson** 1904  
**Harman/Kardon** 0054  
**Harvard** 0180  
**Havermy** 0093  
**Hello Kitty** 0451 2776  
**Hewlett Packard** 1642  
**Hisense** 3519 2183 0748  
1314 1660 2098  
**Hitachi** 1643 0145 1145 0056  
0679 1576 1904 2756  
**ILO** 1394 1463 1286 1665  
1684 1990  
**Infinity** 0054  
**Initial** 1990  
**Insignia** 2049 1641 1326 1564  
1423 2002 1785 1892 2184  
2417 2751 0171 0463 2088  
1963 1660 1517 1385  
**Inteq** 0017  
**ISymphony** 3094 3118 3382  
**JBL** 0054  
**JCB** 0000  
**JCM** 2256  
**Jensen** 1326 2541  
**JVC** 1774 1601 2271 2264 0053  
0650 0463 0731 1253 1670 1923 2321  
**KDS** 1498 1687  
**KEC** 0180  
**KLH** 0765  
**Konka** 1385 1831  
**KTV** 0180

**Lasonic** 3198  
**LG** 1423 2731 2358 2424 0178  
3397 1265 2834 3098 2612 0017  
**Lloyd's** 1904  
**LodgingStar** 3147  
**Luxman** 0056  
**LXI** 0156 0054 0178 0047 0154  
**MAG** 1498 1687  
**Magnasonic** 1913  
**Magnavox** 1867 1454 1455 2597  
2372 1866 0054 0171 0706 1365 1904 1913 1944 1963 1990 2902 3708 1755 0051  
**Marantz** 1454 0054 1398  
**Matsushita** 0250 0650  
**Maxent** 1755 1757  
**MB Quart** 1868  
**Megatron** 0178 0145  
**Memorex** 0463 0178 0154 0150  
1570 1665 1670 1785 1892 1924 1927 1938  
**MGA** 0178 0150  
**Midland** 0047 0017 0051  
**Mintek** 1990  
**Mitsubishi** 1250 0150 1797  
0093 0178  
**Motorola** 0093  
**MTC** 0060 0056  
**Multitech** 0180  
**NAD** 0156 1156 0178 0056  
**Naxa** 2104 3154 3382  
**NEC** 0056 1398 1704 1797 2293  
**NetTV** 1755  
**Nexus Electronics** 2183  
**Nikko** 0178 0092  
**Norcent** 1589 0748 1365 1590  
**Norwood Micro** 1286  
**NTC** 0092  
**NuVision** 1657 2158  
**Ölevia** 1610 1144 1240  
**Onwa** 0180  
**Optimus** 0250 0650 0154  
1913 1924 1927  
**Optoma** 1348  
**Optonica** 0093  
**Orion** 0463 1463 1938 3540  
**Panasonic** 1480 1291 0250 0650  
2264 1927 1924 1947 0051 1941 1310 1271 1946  
**PARK** 2104  
**Penney** 0156 0178 0060  
0047 0051 1347

**Philco** 1394 0054 0171  
1271 1665 1963  
**Philips** 1454 1867 2372  
1744 1455 2374  
**RevolutionHD** 1623  
**Runco** 0017 1398  
**Sampo** 1755  
**Samsung** 2051 0812 0702 0060  
1060 0766 0814 1959 2596 0650 0178 0056  
**Sansui** 0171 0463 1463 1670  
1892 1904 1938 3540 3564  
**Sanyo** 1142 0154 1362 0054 0088  
**Sceptre** 0878 1217 1360 1599  
2337 2506 2528  
**Scotch** 0178  
**Scott** 0178 0180  
**Sears** 0156 0054 0178 0047  
0171 0154 0056 1904  
**Seiki** 0178 2964 3559 3560  
**Seleco** 1351  
**Sens** 1865  
**Sharp** 2360 0818 0093  
**Sheng Chia** 0093  
**Sherwood** 1399 3061  
**Sigmac** 3423 3477  
**Signature** 0054  
**Solé** 1623  
**Sony** 0810 0000 1300  
0834 1685 1904  
**Soundesign** 0178 0180  
**Soyo** 1831  
**Spectroniq** 1498 1687  
**Squareview** 0171  
**SSS** 0180  
**Starlite** 0180  
**SunBriteTV** 1610 2337 2528 2935  
**Superscan** 0864 0093 1944  
**Supersonic** 1753 2104 3154 3593  
**Supreme** 0000  
**SVA** 0748 1963  
**Sylvania** 1864 1394 1886 0171  
1944 1963 1271 0054  
1314 1665 1913 3563  
**Symphonic** 1394 0171 0180  
1904 1913 1944  
**Syntax** 1610 1144 1240  
**Tandy** 0093  
**Tatung** 1756 1286

**TCL** 2434 3183  
**Technics** 0250 0051  
**Techwood** 0051 0056  
**Teknika** 0054 0060 0180  
0150 0092 0056  
**Telefunken** 0702 0056  
**Thomas America** 1904  
**TMK** 0178 0056  
**TNCi** 0017  
**Toshiba** 1524 1656 2724 0156  
1156 0822 1256 2006 0060 0154 1265 2684 1959 1945 1704 0650 1369  
**TruTech** 1665 1723 2066  
**TVS** 0463  
**US Logic** 1286  
**Venturer** 1865 1868  
**Victor** 0053  
**Vidikron** 0054 1398  
**Vidtech** 0178  
**Viewsonic** 2087 2014 2049 0864  
1755 1564 0885 1330 1365 1542 1578 1627 2277 3706  
**Viore** 1684 2104 2352  
3094 3118 3382  
**VisionQuest** 3380  
**Vivitek** 1369  
**VIZIO** 1758 3758 2757 3358  
2512 1756 0864 0885  
**Wards** 0156 1156 0054 0000  
0178 0060 0047 0154 0017 0051 0180 0056 1347  
**Waycon** 0156  
**Westinghouse** 1712 3579 0885  
3382 1300 1577 3094 3470  
0889 1282 2293 0451 1217  
**White Westinghouse** 0463 1661  
**Wyse** 1365  
**Zenith** 1423 0017 2358 2731  
0000 0178 0047 0463 1265  
1145 0145 0092 1661 1365  
1904 2612

## **Why does the LED on my remote blink five times with each keypress?**

Five blinks mean your batteries are low and need to be replaced soon.